

SECTION 204-01: Front Suspension  
REMOVAL AND INSTALLATION

1998 Mark VIII Workshop Manual


## Wheel Hub and Bearing

### Removal


1. Raise the vehicle on a hoist; refer to [Section 100-02](#).
2. Remove the wheel and tire assembly; refer to [Section 100-02](#).
3. **NOTE:** Mark the front disc brake rotor and the lug bolt so the front disc brake rotor can be installed in the same position.

Remove the front disc brake caliper and the anchor plate, the disc brake rotor and the disc brake rotor shield. Support the disc brake caliper with wire; refer to [Section 206-03](#).

4. Remove the wheel hub (1104).
  - Remove and discard the front hub cap grease seal (1N135)
  - Remove and discard the front axle wheel hub retainer (3B477)

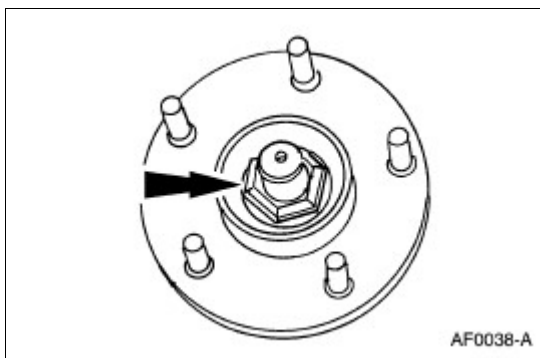

5. Remove the wheel hub.

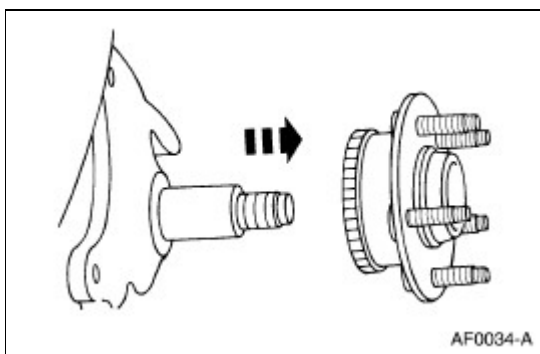

### Installation

1. Follow the removal procedure in reverse order.

