

SECTION 417-01: Exterior Lighting
REMOVAL AND INSTALLATION


1998 Mark VIII Workshop Manual

Lamp Switch —Headlamp


Removal

1. **NOTE:** Move the steering column to the full out and down position before disconnecting the battery.


Disconnect the battery ground cable.

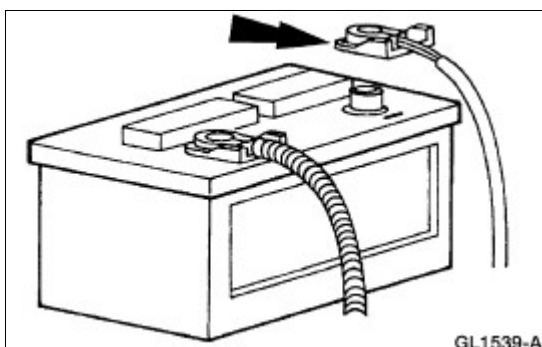


2. Remove the screws and remove the lower steering column cover.

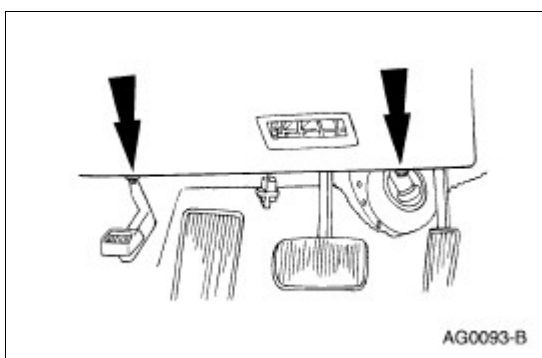


3. Disconnect the steering column connectors.

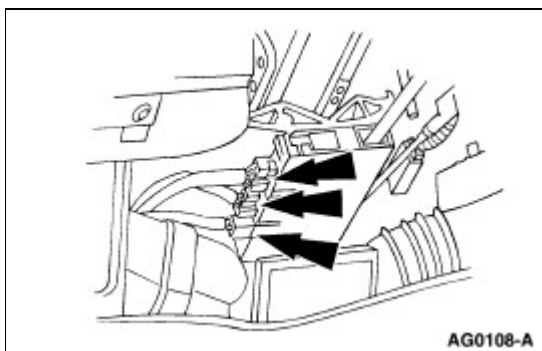


4. Remove the nuts and lower the steering column.

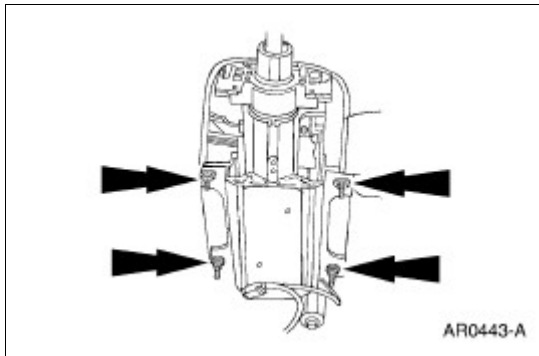


5. Remove the steering column cover.
 1. Remove the two screws.
 2. Remove the steering column cover.

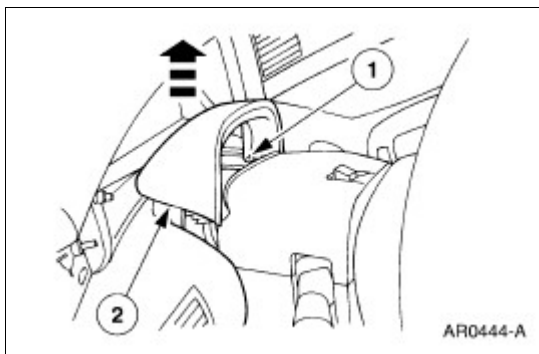


6. Remove the headlamp switch finish panel.
 1. Remove the headlamp switch knob.
 2. Remove the headlamp switch finish panel.

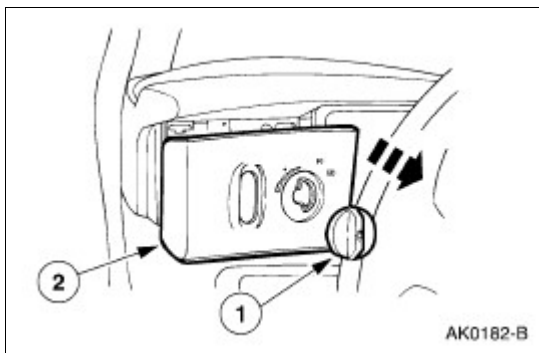


7. Remove and disconnect the dimmer switch.

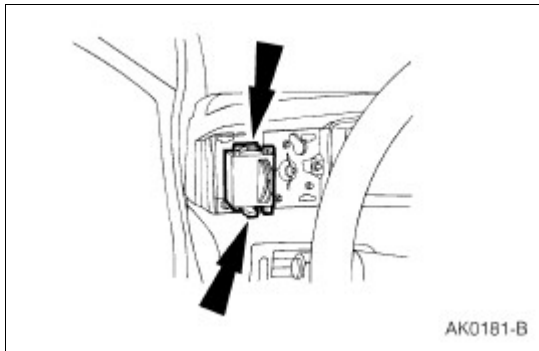


8. Remove the instrument cluster finish panel screws.

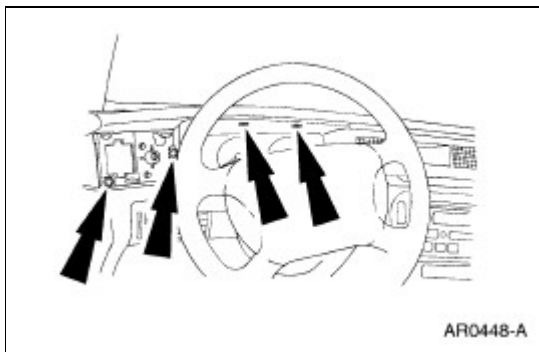

9. Disconnect the headlamp switch and remove the instrument cluster finish panel.

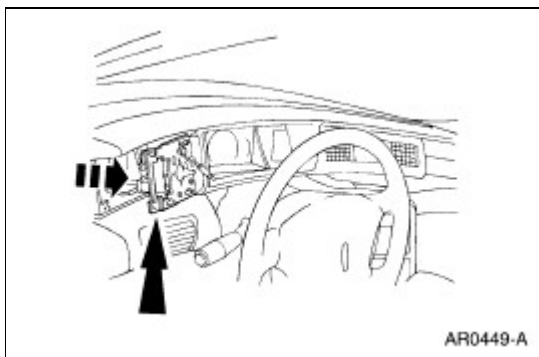

10. Remove the headlamp switch mounting screws and remove the headlamp switch.

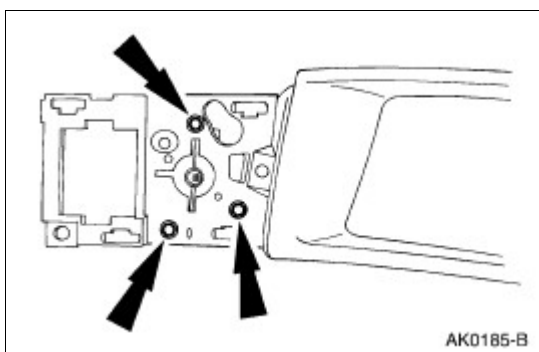

Installation

1. **NOTE:** When the battery (10655) is disconnected and reconnected, some abnormal drive symptoms may occur while the vehicle relearns its adaptive strategy. The vehicle may need to be driven 16 km (10 mi) or more to relearn the strategy.

To install, reverse the removal procedure.

